**2006-08 ACCESSORIES & EQUIPMENT**

**Consoles - Civic (All Except Hybrid)**

## CENTER CONSOLE REMOVAL/INSTALLATION

### Special Tools Required

KTC trim tool set SOJATP2014 *

*Available through the American Honda Tool and Equipment Program; call 888-424-6857

SRS components are located in this area. Review the SRS component locations (see **COMPONENT LOCATION INDEX** ) and the precautions and procedures (see **PRECAUTIONS AND PROCEDURES** ) before doing repairs or service.

**NOTE:**

- **Use the appropriate tool from the KTC trim tool set to avoid damage when prying components.**
- **Take care not to scratch the front seat, dashboard, and related parts.**

1. Remove the passenger's dashboard undercover (see **PASSENGER'S DASHBOARD UNDERCOVER REMOVAL/INSTALLATION** ).
2. Standard M/T model: Lower the shift lever boot (A) to release the hooks (B) from the boot, then remove the shift knob (C).

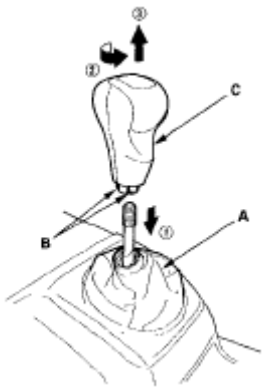


**Fig. 1: Removing Shift Knob**

3. Si model: Loosen the locknut (A), then remove the shift knob (B).

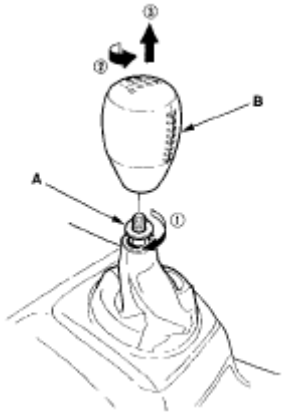


**Fig. 2: Removing Shift Knob (Si Model)**

4. Standard M/T model: Detach the clips by pulling the front inner panel (A) up.

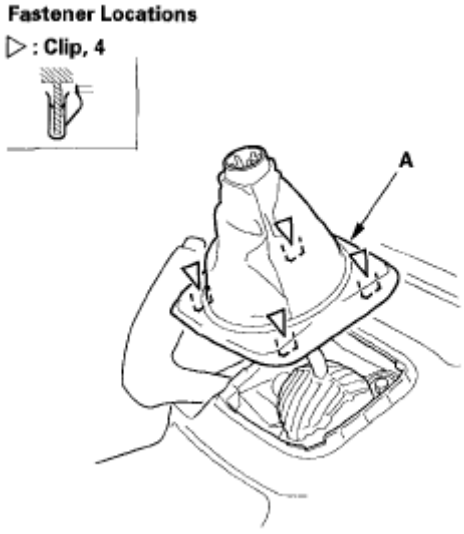


**Fig. 3: Pulling Front Inner Panel To Detach Clips**

5. Si model: Remove the locknut (A). Detach the clips by pulling the front inner panel (B) up.

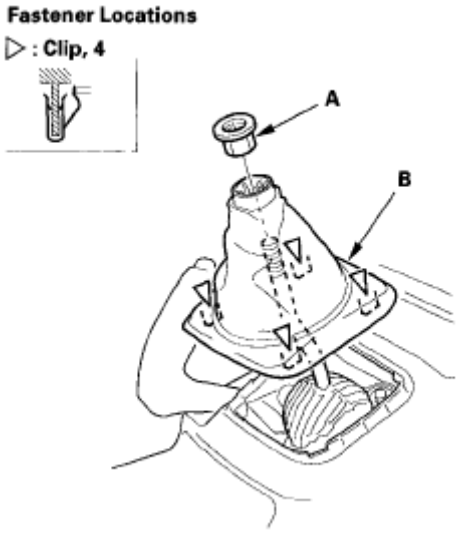


**Fig. 4: Pulling Front Inner Panel To Detach Clips (Si Model)**

6. Gently pull out along the rear of the center console panel (A) to release the clips (B, C).

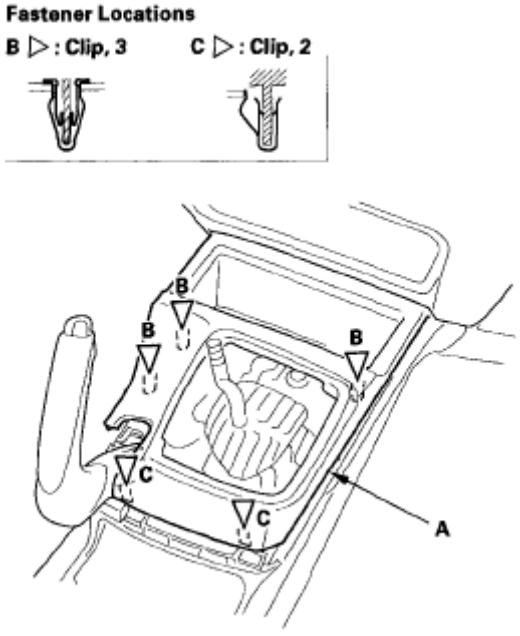


**Fig. 5: Releasing Clips By Pulling Rear Of Center Console Panel**

7. Pull the center console panel (A) up and rearward to release the tabs (B).

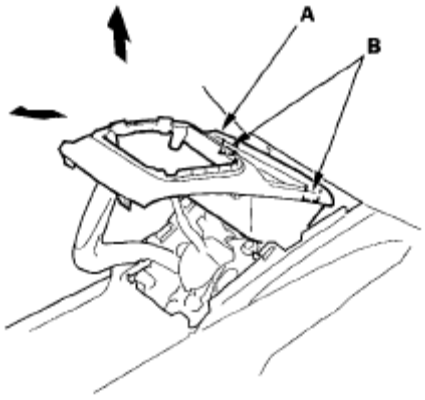


**Fig. 6: Releasing Tabs By Pulling Center Console Panel**

8. Open the armrest (A), then remove the console box mat (B) and bolts.

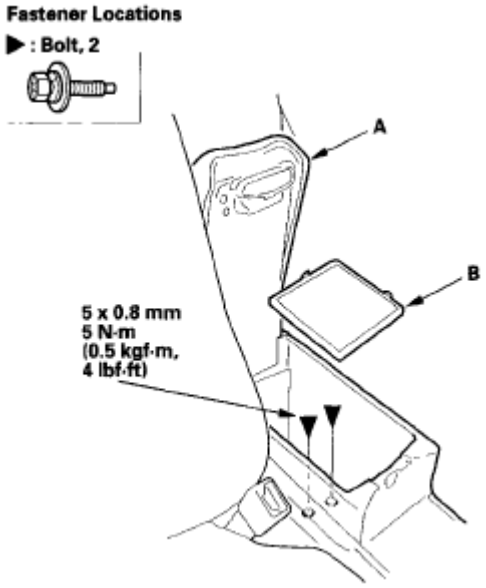


**Fig. 7: Removing Console Box Mat And Bolts (With Specifications)**

9. From the front portion of the center console, remove the bolts (A) and clips (B), and disconnect the console subharness connector (C), then detach the connector clip (D).

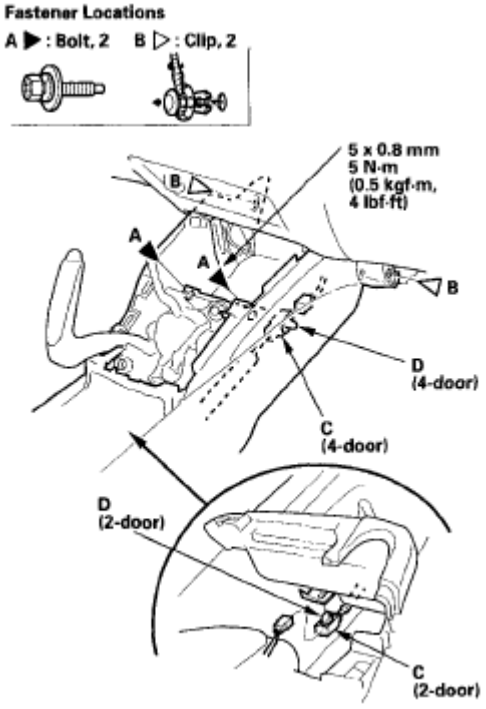


**Fig. 8: Disconnecting Console Subharness Connector (With Specifications)**

10. Slide both front seats all the way back, and recline the seat-back fully.
11. Slide the center console (A) rearward to release the pins (B) from the bracket (C).

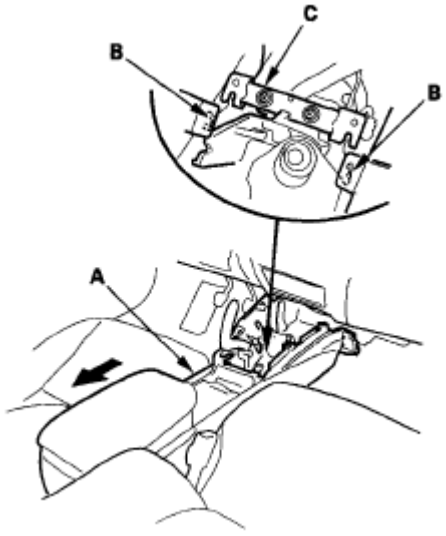


**Fig. 9: Sliding Center Console Rearward To Release Pins**

12. Lift up the rear of the console (A), and remove it from the dashboard.

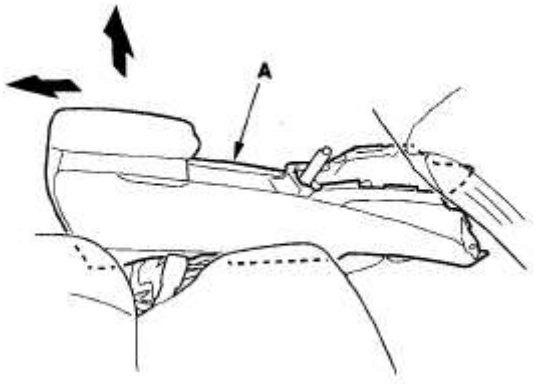


**Fig. 10: Removing Rear Of Console**

13. Install the console in the reverse order of removal, and note these items:
    - Make sure each connector is plugged in properly.
    - Check if the clips are damaged or stress-whitened, and if necessary, replace them with new ones.
    - Push the clips and hooks into place securely.
    - When installing the center console panel, install the tabs (A) into the notch (B) of the parking brake base frame (C).

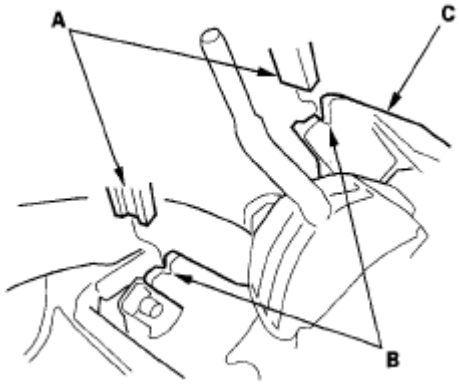


**Fig. 11: Installing Console**

14. Si model: Install the shift knob (A).
    - 1 By hand, thread the locknut (B) on to the shaft unit it bottoms out on the shaft.

- 2 By hand, thread the shift knob on the shaft.
- 3 Rotate the shift knob to proper position.
- 4 Tighten the locknut securely.

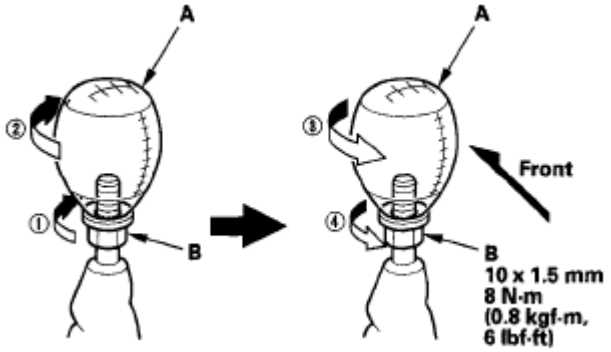


**Fig. 12: Installing Shift Knob (Si Model) (With Specifications)**

## CENTER CONSOLE DISASSEMBLY/REASSEMBLY

### Special Tools Required

KTC trim tool set SOJATP2014 *

*Available through the American Honda Tool and Equipment Program; call 888-424-6857

**NOTE:**

- **Use the appropriate tool from the KTC trim tool set to avoid damage when prying components.**
- **Take care not to scratch the center console, dashboard, and related parts.**

1. Remove the center console (see **CENTER CONSOLE REMOVAL/INSTALLATION** ).
2. If equipped, remove the center console armrest (see **CENTER CONSOLE ARMREST REPLACEMENT** ).
3. Using a T20 TORX bit, remove the screws, and disconnect the accessory socket connector (A).

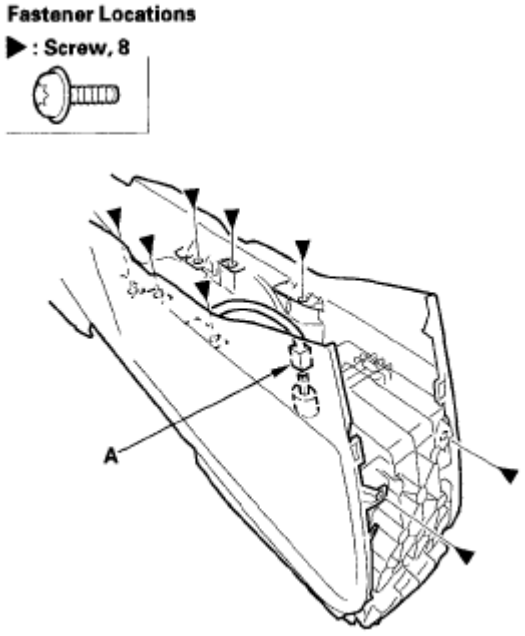


**Fig. 13: Identifying Accessory Socket Connector**

4. Release the hooks (A) and pins (B), then separate the left console side panel (C), right console side panel (D), console beverage holder (E) and console box (F). If equipped, detach the harness clips (G), then remove the console subharness (H) from the hooks (I). 4-door is shown; 2-door is similar.

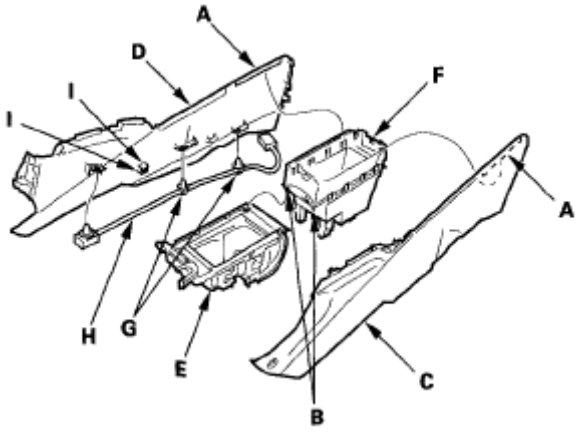


**Fig. 14: Removing Console Subharness**

5. Release the hooks (A, B), then separate the console upper box (C) and console lower box (D).

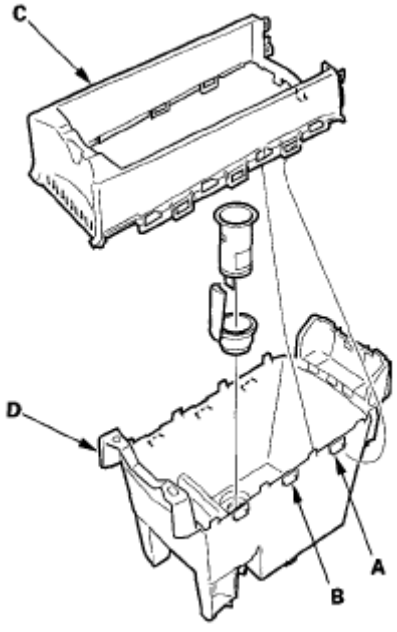


**Fig. 15: Separating Console Upper And Lower Box**

6. Assemble the console in the reverse order of removal, and make sure the console subharness connector is plugged in properly.

## CENTER CONSOLE ARMREST REPLACEMENT

**FOR SOME MODELS**

**NOTE: Take care not to scratch the armrest, center console, and related parts.**

1. Remove the center console (see **CENTER CONSOLE REMOVAL/INSTALLATION** ).
2. Gently pull out the center console rear cover (A) to detach the clips.

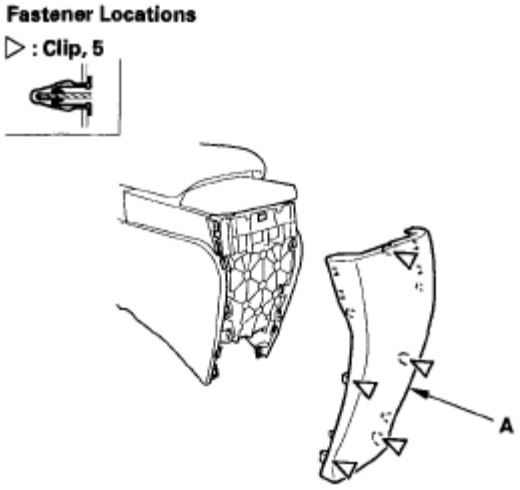


**Fig. 16: Removing Center Console Rear Cover**

3. Open the armrest (A), pull the pin (B) off the armrest, then separate the armrest and center console (C).

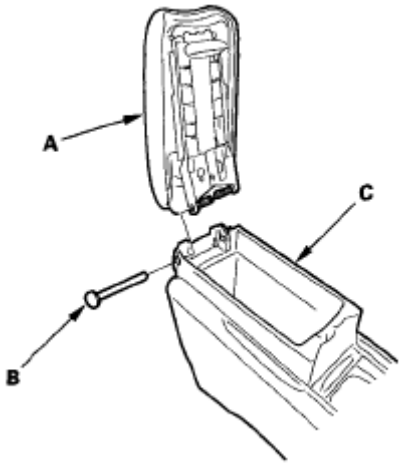


**Fig. 17: Separating Armrest And Center Console**

4. Install the center console armrest in the reverse order of removal and check if the clips are damaged or stress-whitened, and if necessary, replace them with new ones.

## ARMREST LOCK REPLACEMENT

**FOR SOME MODELS**

**NOTE: Take care not to scratch the armrest and related parts.**

1. Remove the center console armrest (see **CENTER CONSOLE ARMREST REPLACEMENT** ).
2. Using a T15 TORX bit, remove the screws. Slide the armrest liner (A) downward to release the hooks (B), then remove the armrest liner and armrest spring (C).

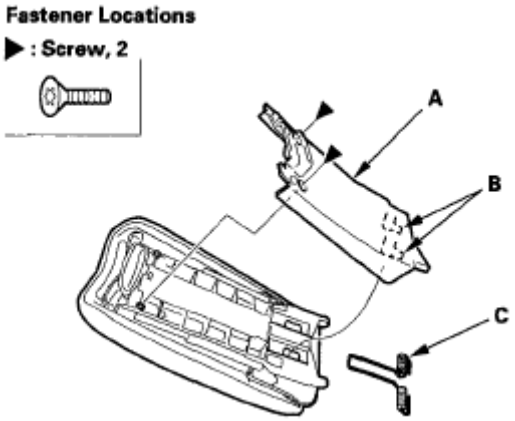


**Fig. 18: Removing Armrest Liner And Spring**

3. Using a T15 TORX bit, remove the screws.

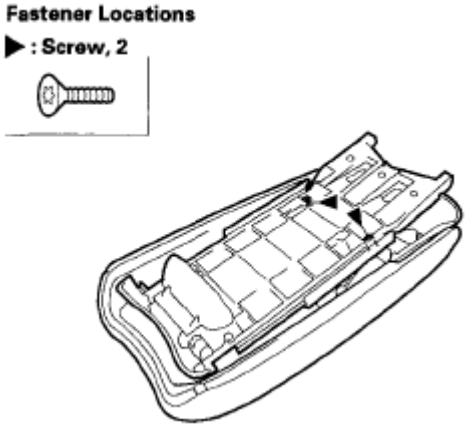


**Fig. 19: Removing Armrest Screw**

4. Slide the armrest (A) all the way forward, using a T15 TORX bit, remove the screws, then remove the armrest backbone (B).

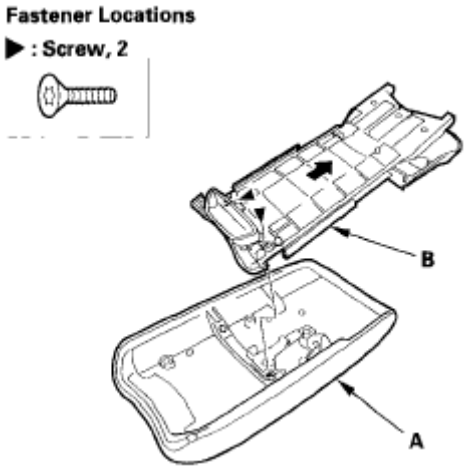


**Fig. 20: Removing Armrest Backbone**

5. From the back of the armrest backbone (A), push the edge of the armrest lock pin (B) with a flat-tip screwdriver, then slide the armrest lock pin fully.

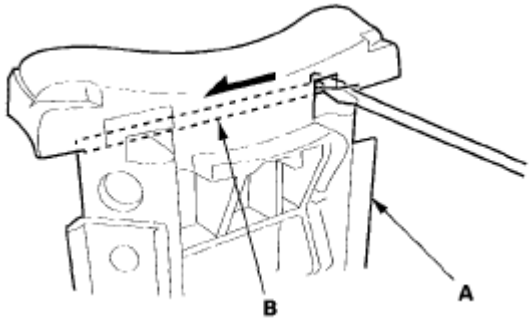


**Fig. 21: Sliding Armrest Lock Pin**

6. Remove the armrest lock (A) with the armrest lock pin (B) from the armrest backbone (C).

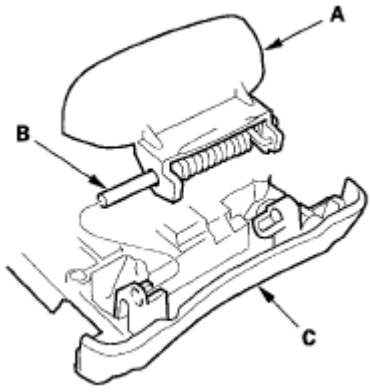


**Fig. 22: Removing Armrest Lock With Armrest Lock Pin**

7. Remove the armrest lock pin (A), then separate the armrest lock (B) and armrest lock spring (C).

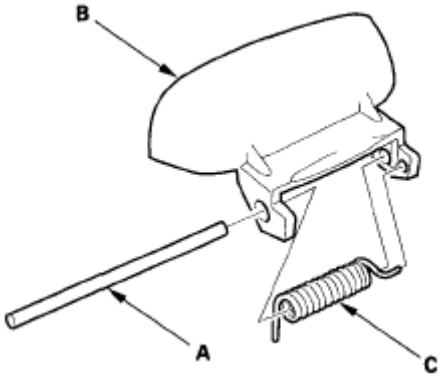


**Fig. 23: Removing Armrest Lock Pin**

8. Install the armrest lock in the reverse order of removal.